THE BECKMAN COULTER logo, COULTER, DxH, TruColor, and UniCel are trademarks of Beckman Coulter, Inc; COULTER and UniCel are registered in the USPTO.

## **UniCel DxH Slidemaker Stainer - Handling Torn Ribbon**


Attempt to repair the existing cartridge printer ribbon with adhesive tape.

**Note:** If not repaired correctly the ribbon could continue to break more frequently.



2 Ribbon must be between the plastic cartridge cover and metal rollers

**Note:** Ensure that before the ribbon is secured that it is guided between the plastic cartridge cover and the metal rollers on both sides.

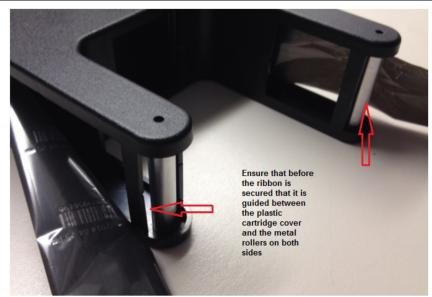

This document is not intended to replace the information in your Instrument Instructions for Use Manual (IFU). Information in the Instructions for Use Manual supersedes information in any other manual.

UniCel DxH Series SMS Troubleshooting

Page 1 of 2

Beckman Coulter

Ver 1.0 (October 2015)

Technical Training

THE BECKMAN COULTER logo, COULTER, DxH, TruColor, and UniCel are trademarks of Beckman Coulter, Inc; COULTER and UniCel are registered in the USPTO.

- Route the ribbon correctly between the metal rollers and the guides on the cartridge cover.
- Re-install the printer (follow the procedure in the IFU Instructions for Use manual.
  - Chapter 13 > Replacing the Printer Ribbon or Cartridge > Replace the printer cartridge.



