 


Module Keypad Display

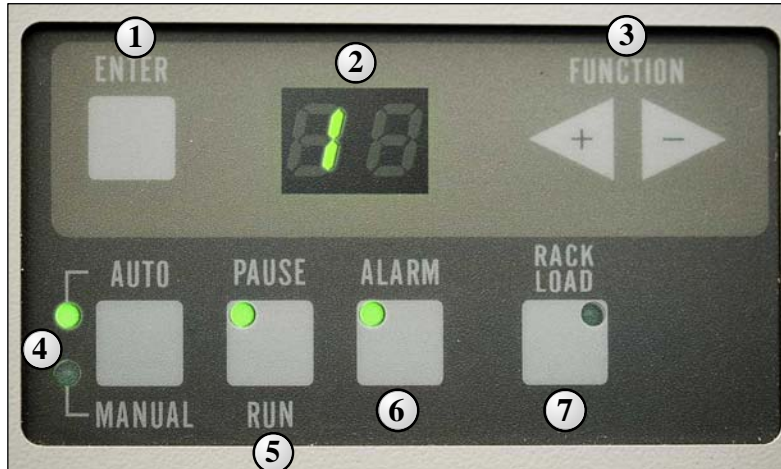

Keypad displays module status and is used by the operator to interact with the module.

1. **Enter**
Enter function codes (Manual mode required)
2. **Window**
Displays error code or function mode
3. **Function**
The right arrow to display the two digits error code
The left arrow to display previous display
Also used to select scroll for function codes
4. **Auto / Manual**
Switch module to Automatic or Manual mode
5. **Pause / Run**
Pause or resume operation
Green light indicates module is paused
6. **Alarm**
Silence audible alarm. Green light indicates an alarm occurred.
7. **Rack Load**
Use when:
Loading the Inlet with samples
Loading a rack of Aliquot tubes
Loading a rack of Aliquot tips
Unloading rack(s) from an Outlet or Stockyard